

CountEasy Update for Bank of England Polymer Notes (£20)

For Software Version 3.1 or higher

The Bank of England is introducing a new polymer £20 note in early 2020. These instructions will ensure that your CountEasy is set up correctly for the new note as well as allowing you to check the settings for all the other current Bank of England notes and the £1 coin.

Entering Setup Mode Level 2 (this allows you to start updating your CountEasy)

Press and hold down the





(down) button and the button at the same time for about 4-5

seconds. The screen will momentarily display 'SETUP' followed by 'GRAMS'

Now press and hold down the





(down) button and the button at the same time again for

about 4-5seconds. The screen will momentarily display 'SETUP 2' followed by 'GRAMS'

Updating the Note Settings

until 'NOTE ENABLE?' appears, press



to select the option. Use



in turn. Check that the settings are as the table below, following the instructions below to change any that are wrong: (The £20 Polymer setting is shown in RED)

£5	OFF	Paper £5	
£5*	ON	Polymer £5	
£10	OFF	Paper £10	
£10*	ON	Polymer £10	
£20	ON	Paper £20	
£20*	NO LEARN	Polymer £20	
£50	ON	Paper £50	
All Others	OFF		

Changing a Setting -

Select the required note and then press



followed by



to change the setting of a note between

OFF, ON, NO SCROLL, NO LEARN, NO SCR/LRN and then press



to confirm. Repeat for other

notes as required and then press



once to return to 'NOTE ENABLE?'.

ESC



Checking and setting the Note Weights

Use the

button until 'NOTE WEIGHT?' appears press



to select the option, press



the required note and display its weight. Check that the following weights are configured (The £20 Polymer is shown in RED):

Note	Weight	Positive Tolerance	Negative Tolerance
£5*?	0.746g	A A	Negative Tolerance
£10*?	0.828g	4	-3
£20		4	-3
£20*	1.060g	4	-3
	0.905g	5.2	-5.2
£50?	1.27g	4	-3
All Others	Do not change, not used		

Adjusting a Note Weight

Use

to display the required note and then press



to select it. The weight can now be adjusted

with the

button and confirmed by pressing



Now select the next note as required and repeat.

When finished, press



once to return to 'NOTE WEIGHT?'.

ESC

Checking and Setting the Note Tolerances

Use

until 'NOTE TOLERANCE?' is displayed then press



. Use

to display "POSITIVE" and

then



to select it. Use



to display each note's POSITIVE tolerance.

Check that the POSITIVE tolerances are all 4 except for the £20* note which needs to be 5.2 (as per the table above)

To adjust a tolerance, display the required note and press



. The tolerance can now be adjusted

with the



button until the correct value appears. Confirm the tolerance by pressing



Now select the next note as required and repeat.



Then press



once to return and repeat the whole process for the NEGATIVE tolerance, making

ESC

sure that all negative tolerances are set to -3 except the £20* which needs to be -5.2 (as per the table above)

Now press



once to return to the Menu

ESC

Checking and Configuring the £1 Coin

Use the 'COIN ENABLE' and 'COIN WEIGHT' menu options and follow the same process described for notes to set the £1 to OFF, the £1* to ON and the £1* weight to 8.75gm.

Now press



twice to return to normal operation.

ESC

Summary & Tips

This process has now set up your CountEasy for operation with current Bank of England banknotes, including the new £20 polymer.

Please note that if your CountEasy is to be used in Scotland then different settings will be required. Please contact the Helpline as described below

Questions?

In case of any problems / questions contact the CE Helpline 02476 584 355