





 

 










Disabling the old £20 & £50 paper note – UK English/Scottish

IMPORTANT

Before following these instructions, it is necessary to close the count, to do this, with the unit showing the denomination screen press the  key then press the  key and the unit will show the message '**Count in Progress**' now press the  key.

1. Use the  key to select '**Setup Wizard**' and then press the  key.
2. When you are asked for a PIN number press the arrow keys in the following order , , , .
(UP-DOWN-LEFT-RIGHT)
3. Use the  key to select '**Note Wizard**' and press the  key.
4. Use the  key to select '**£20**' [same process for £50} and press the right-hand soft key  labelled '**Change**' to change the ✓ to a X. Now press the  key to save the new setting.
5. The old £20 and £50 notes are now disabled on your unit and there is only provision for counting the Polymer notes on the N setting. Press the  key to return to normal counting.

If you require assistance, then please call the customer helpline on:

01633 27 68 68